MOLD MONITORING




CVe MONITOR® ONDEMAND MOLD MONITORING

APPLICATION GUIDELINES

- Progressive's OnDemand CVe Monitor tracks tool activity, allowing users to view data on the display or from comprehensive reports using the free PC-based OnDemand application.
- 7-digit LCD display with a push button to move through the display modes.
- 16GB flash drive included for file storage. Replaceable battery.
- Water resistant with an ingress protection rating of IP52.
- Maximum temperature: 190°F (90°C). For protection against higher temperatures, refer to the Insulators available on pages F-12 and F-13.
- Dimensional compatibility with Progressive's mechanical CounterViews.
- Mini USB connectivity for data retrieval with cables sold separately on page F-8.
- Cover Plates for protection are sold separately on page F-14.

MOUNTING OPTIONS

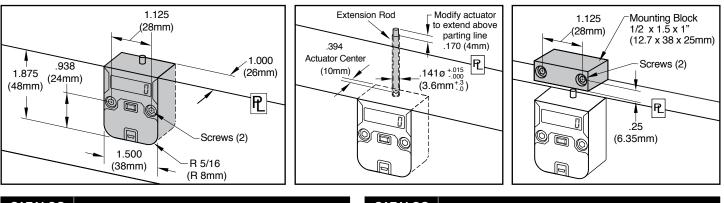

CATALOG NUMBER	DESCRIPTION	CATALOG NUMBER	DESCRIPTION
CVE	CVe Monitor including #8-32 x 1" SHCS (2) and M4 x 25mm SHCS (2)	CVE-INT	Internal Extension Rod (8"/200mm)
		CVE-EXT	External Mounting Block including #8-32 x 1" SHCS (2) and M4 x 25mm SHCS (2)

To Order:

- For installation below parting line (rails as shown in the center graphic above), order the CVE and CVE-INT.
- For installation outside of the mold (right graphic), order the CVE and CVE-EXT.

ON-MOLD DISPLAY MODES

Each device is provided at -25 cycles to allow for mold set up and initialization of the CVe Monitor. Once it reaches zero (0), all timers and data will reset on the monitor. During production, users can press the button on the front of the monitor and review the following information on the display:

Cycle Count

Total cycles for the life of the mold is presented on the main screen.

Cycle Time

Since the first production cycle, cycle time for the life of the mold.

Cycle Time-Recent

Cycle time for the past 500 cycles is shown in seconds.

Mold Temperature

View current temperature experienced by the monitor (°C) by pressing button twice.

US Patents: 8,899,955, 8,883,054, & 10,715,464. European and Chinese patents applied for and issued.









Efficiency Percentage

The percentage of time that the mold has been actively cycling vs being idle.

Efficiency Percentage-Recent

The percentage of time the mold has been active in the past 500 cycles.


Cycle Count Reset

Press and hold button to reset separate counter to 0 for interim monitoring of cycles.

Flash Drive

Utilize the 16GB flash drive by connecting the CVe to a PC/Tablet with an industry-standard mini USB cable, sold on page F-8.



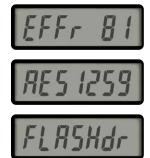



CVe MONITOR® ONDEMAND MOLD MONITORING

Once data is initialized using the complimentary OnDemand software (from procomps.com/cve-ondemand), users can choose to be alerted to the following sets of conditions for the OnDemand CVe Monitor.

Preventive Maintenance

During initialization, Preventive Maintenance (PM) checkpoints are entered and saved onto the OnDemand CVe Monitor. If a PM checkpoint is exceeded, the monitor enters the PM alert mode and displays both a wrench icon and PM Due as shown at right.

When PM is performed and entered via OnDemand or by the in-mold actuation/button push combination, the next checkpoint for the PM will be written. If no PM is performed, the OnDemand CVe Monitor will remain in PM alert mode until the user performs all PMs whose thresholds have been exceeded.

Cycle Time

During initialization, the target cycle time can be written to the monitor using OnDemand. Any variation greater than 2% from the target will enter the alert mode and display the clock icon as shown at right. When the cycle time returns to within 2% of the target, the alert is removed.

Efficiency

During initialization, the target efficiency can be written to the monitor using OnDemand. Any variation greater than 2% from the target will enter the alert mode and display the percentage (%) icon as shown at right. When the efficiency returns to within 2% of the target, the alert is removed.

Low Battery

The OnDemand CVe Monitor has a battery life of approximately 4 years in typical molding environments where temperatures are controlled. (The battery is 1/2AA lithium non-rechargeable with 3.6V.) When the battery reaches a specified level, the display will show a battery icon as shown at right, and the replacement kit can be ordered separately below.

RETROFITTING

Users can view additional data by double-clicking the button on the monitor.

Retrofit CVe for CounterView Tools

During initialization, molders can start the cycle count with the tool's actual cycle count from an existing CounterView or known cycles from maintenance records. Once entered, the user can see the total cycles for the tool, which includes the count of the cycles from the counter and those run with the CVe Monitor.

In the graphic at right, the tool had 1,000,000 cycles on it originally, but ran 507,288 after the OnDemand CVe Monitor was installed.

CABLES AND CONNECTIVITY

Using a USB cable, users can connect the OnDemand CVe Monitor to their computer or tablet and view data in OnDemand, outlining the reason for the report generation. Notes can be included and user information is recorded for historical reference. More details about OnDemand are on the following pages.

	5]	2.0.1/5.1.	version 3.1.0/	Isolitwale	LIVILY LOG	OnDemand Activ		
						December 17, 2017	November 23, 2017	CVe Initialize Date
						OKX1234	OKX1234	Device ID
						8565B	8565B	Tool ID
						Blower Housing	Blower Housing	
						ABT57	ABT57	Part ID
A DESCRIPTION OF A DESC						Mocha	Mocha	Program Name
						Crimson Fan	Crimson Fan	Customer
						94%	N/A	Target Efficiency %
CATA						7.5	N/A	Target Cycle Time
-						50000	50000	Initial PM Point
NUM						100000	100000	Target PM Interval
						1000000	1000000	Cycles Prior to CVe Installation*
						ABT1 0356-5686	N/A N/A	OEM ID ASSET ID
						0336-3686	N/A	ASSET ID
CVEL-D	ecting CVe Monitor	Reason for conn						
	Notes	REV GEN	Destination	Company		Cycles OD User	Battery	Date/Time
	N/A Replaced damaged core pin in cavity 4	N N Y N	CrimsonO@crmn.com	Injection Tech	11 Blake Fitz	507,288 INJECTI1	OK	October 4, 2018
CVEL-D	N/A Replaced damaged core pin in cavity 4 N/A Data Pull	N N Y N			11 Blake Fitz			
CVEL-D	N/A Replaced damaged core pin in cavity 4 N/A Data Pull N/A Data Pull	N N Y N	CrimsonO@crmn.com	Injection Tech	11 Blake Fitz 11 Blake Fitz	507,288 INJECTI1	OK	October 4, 2018
CVEL-D	N/A Replaced damaged core pin in cavity 4 N/A Data Pull	N N Y N N N N Y N N Y N	CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech	11 Blake Fitz 11 Blake Fitz 11 Blake Fitz	507,288 INJECTI1 506,524 INJECTI1 491,274 INJECTI1	ОК	October 4, 2018 October 4, 2018 September 19, 2018
CVEL-D	N/A Replaced damaged core pin in cavity 4 N/A Data Pull N/A Pulled from production for mold operational issues. It is being sent f evaluation and rework	N N Y N N N N Y N N Y N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House	11 Blake Fitz 11 Blake Fitz 11 Blake Fitz HOU1 Chuck Louse	507,288 INJECTI1 506,524 INJECTI1 491,274 INJECTI1 482,567 MOLDHOU	OK OK	October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018
CVEL-D	N/A Replaced damaged core pin in cavity 4 N/A bata hull N/A evaluation and rework N/A caulation and rework N/A full PM: Cavity #2 was shutoff N/A full PM: Cavity #2 was shutoff	N N Y N N N N Y N N Y N N Y N N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House	11 Blake Fitz 11 Blake Fitz 11 Blake Fitz 11 Blake Fitz HOU1 Chuck Louse HOU1 Chuck Louse	507,288 INJECTI1 506,524 INJECTI1 491,274 INJECTI1 482,567 MOLDHOU 364,001 MOLDHOU	OK OK OK	October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018
	NA Replaced damaged core pin in cxvhy 4 NA Data Pall NA Data Pall NA Bosh Pall NA Bosh Pall NA Bosh Pall NA Fall PM NA Fall PM NA Fall PM	N N Y N N N Y N N Y N N Y N N N Y N N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House	11 Blake Fitz 11 Blake Fitz 11 Blake Fitz HOU1 Chuck Louse HOU1 Chuck Louse HOU1 Chuck Louse HOU1 Chuck Louse	507,288 INJECTI1 506,524 INJECTI1 491,274 INJECTI1 482,567 MOLDHOU 364,001 MOLDHOU 314,856 MOLDHOU	OK OK OK OK OK	October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018
CVEL-D	N/A Replaced damaged core pin in cavity 4 [N/A Oata Puil N/A Oata Puil evaluation and rework N/A Fuil PMC Cavity 82 was shutoff N/A Fuil PMC N/A Fuil PMC	N N Y N N N Y N N Y N N Y N N N Y N N N Y N N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House	11 Blake Fitz '11 Blake Fitz '11 Blake Fitz HOU1 Chuck Louse	507,288 INJECTII 506,524 INJECTII 491,274 INJECTII 482,567 MOLDHOL 364,001 MOLDHOL 314,856 MOLDHOL 260,002 MOLDHOL		October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018 April 28, 2018
	N/A Replaced damaged core pin in cxvity 4 [N/A Ota Path Pail N/A Path Pail Pail from production for mode operational issues. It is being sent f Pail Pail revolv. N/A Fail PM. N/A Fail PM. N/A Fail PM. N/A Fail PM.	N N Y N N N Y N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House e Mold House	II Blake Fitz 'II Blake Fitz 'II Blake Fitz HOU1 Chuck Louse	507,288 INJECTII 506,524 INJECTII 491,274 INJECTII 482,567 MOLDHOU 364,001 MOLDHOU 314,856 MOLDHOU 260,002 MOLDHOU 211,563 MOLDHOU		October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018 April 28, 2018 April 4, 2018
	N/A Replaced damaged core pin in cavity 4 [A/A Data Puil N _A A Mild from production for mold operational issues. It is being sent maintains and revels. N/A Fail PM-Cavity 82 was shutoff N/A Fail PM-Cavity 82 was shutoff	N N Y N N N Y N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House Injection Tech	II Blake Fitz 'II Blake Fitz 'II Blake Fitz HOU1 Chuck Louse	507,288 INJECTI 506,524 INJECTI 491,274 INJECTI 482,557 MOLIHOU 364,001 MOLIHOU 314,856 MOLIHOU 260,002 MOLIHOU 211,563 MOLIHOU 193,268 INJECTI		October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018 April 4, 2018 March 22, 2018
	N/A Replaced damaged core pin in cxvity 4 [N/A Ota Path Pail N/A Path Pail Pail from production for mode operational issues. It is being sent f Pail Pail revolv. N/A Fail PM. N/A Fail PM. N/A Fail PM. N/A Fail PM.	N N Y N N N Y N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House Injection Tech	Blake Fitz II Blake Fitz II Blake Fitz HOU1 Chuck Louse HOU1 Blake Fitz	507,288 INJECTII 506,524 INJECTII 491,274 INJECTII 482,567 MOLDHOU 364,001 MOLDHOU 314,856 MOLDHOU 260,002 MOLDHOU 211,563 MOLDHOU		October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018 April 28, 2018 April 4, 2018
	N/A Replaced damaged core pin in cavity 4 [A/A Data Puil N _A A Mild from production for mold operational issues. It is being sent maintains and revels. N/A Fail PM-Cavity 82 was shutoff N/A Fail PM-Cavity 82 was shutoff	N N Y N N N Y N N Y N N Y N N	CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com CrimsonQ@crmn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House Injection Tech e Mold House	Blake Fitz 11 Blake Fitz 11 Blake Fitz 11 Blake Fitz HOU1 Chuck Louse	507,288 INJECTI 506,524 INJECTI 491,274 INJECTI 482,557 MOLIHOU 364,001 MOLIHOU 314,856 MOLIHOU 260,002 MOLIHOU 211,563 MOLIHOU 193,268 INJECTI	OK OK OK OK OK OK OK	October 4, 2018 October 4, 2018 September 19, 2018 September 15, 2018 June 28, 2018 May 31, 2018 April 4, 2018 March 22, 2018
	N/A Replaced damaged core pin in cxvity 4 N/A Rota Pull N/A Societies are shutdown. Pulled for evaluation and repair N/A Rota Pull N/A Ro	N N Y N N N Y N N Y N N Y N N	CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com CrimionOfflermn.com	Injection Tech Injection Tech Injection Tech e Mold House e Mold House e Mold House e Mold House Injection Tech e Mold House e Mold House	11 Blake Fitz 1101 Chuck Louse HOU1 Chuck Louse	507,288 INJECTI 506,524 INJECTI 491,274 INJECTI 482,567 MOLDHOJ 364,001 MOLDHOJ 314,856 MOLDHOJ 260,002 MOLDHOJ 211,563 MOLDHOJ 193,268 INJECTI 106,235 MOLDHOJ	ОК ОК ОК ОК ОК ОК ОК	October 4, 2018 October 4, 2018 September 19, 2018 September 19, 2018 June 28, 2018 April 28, 2018 April 4, 2018 March 22, 2018 February 7, 2018













CATALOG NUMBER	DESCRIPTION
CVEL-DATA9	USB 2.0 to Type B Mini 9 Foot, Right-Angle Cable
CVEL-DATA9S	USB A to Type B Mini 9 Foot, Straight Cable
CVE-USB-15	USB 2.0 to Type B Mini, 15 Foot, Common Straight Cable
CVE-REPLKIT	Battery Replacement Kit for the CVe Monitor



MOLD MONITORING

ONDEMAND®


Drive comprehensive reporting using data from the CVe Monitors. Availability for the specific version CVe Monitor is outlined below, but both applications have the following features:

- When the CVe is initialized, users can identify their tool and align all reports with the device serial number which is tracked throughout the application.
- Ten languages supported: English, German, Mandarin, Spanish, French, Italian, Japanese, Korean, Portuguese and Thai. Reports are generated in the chosen language.
- Users can view statistics on a particular tool, review productivity for preventive maintenance (PM), as well as other actual data compared to targets established by the molder.
- Users can also view weekly cycle time and maximum mold temperature tracking with variances over time.
- Both the PC-based software and the App are free of charge but must be utilized with the specific CVe Monitor version that supports the interface.

FOR THE ONDEMAND CVE MONITOR

- Utilize the PC-based system and cables available on the previous page.
- Download from procomps.com/cve-ondemand.

Setto Holds Program Olds Audit <

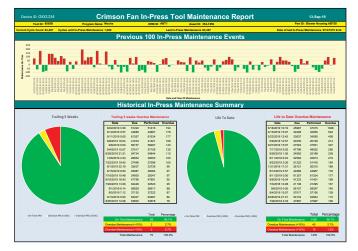

Users initialize the CVe Monitor using the PC-based OnDemand program and can set their targets accordingly.

Standard reports show variances between actual and target data, and the reports can be emailed to stakeholders for analysis.

FOR THE REAL-TIME CVE MONITOR

- Use the ProFile Mobile Application on phones or tablets. No cables or PC required.
 - Download from Apple and Google Play stores.

	oFile [®]	-	•••
	🔹 Press #1	0	1
Create	Work Order	Record Parts Consu	med
Overview 1	Properties Targets	PM Checklists	Monito
MKX12 Last upda	34 ited: 2023-06-26 11:23 a	m X Conn	ected
94%		7.5s	
Target Eff	iciency	Target Cycle Ti	me
100%	Since last report	7.2s Since	e last repo
94%	Last full week	7.4s Last	full week
94%	Life-To-Date	8,5s Life-	To-Date
Efficiency Active 200	ldle Tim	e — Sleep Time	
100 50 0 21 50	05.14 000000000000000000000000000000000000	01.19 01.10 01.10 01.20 01.21 01.21	69.24

😚 T-3083 (🕚	CONNECTED		* Con	il File cabinet	🖌 Edit
Create Work Order	Add Parts Consumed				
Machine ID	Asset ID Asset	Location	Part Name	Part Number	
10	T-3083		12-488007		
	0.000 020770980	imits PM Cher			
Overview Propi	erties Targets & L	imits PM Chei	cklists Monitor		
Overview Prope Name	Type	Occurring	cklists Monitor		Action
		7	Klists Monitor		Action Edit Draft
Name	Туре	Occurring			
Name Maintenance 1	Type Not recurring	Occurring In 21 Days	25		Edit Draft

Users can initialize the Real-Time CVe Monitor via the QR code on the face of the monitor or call up the record within the application using the serial number.

Targets are set within the App and standardized reports can be generated and emailed, while data can also be exported and shared.

